




# FlexMOUNT T-Bar

With 3M® VHB (very high bond) adhesive

Earthquake Fastener

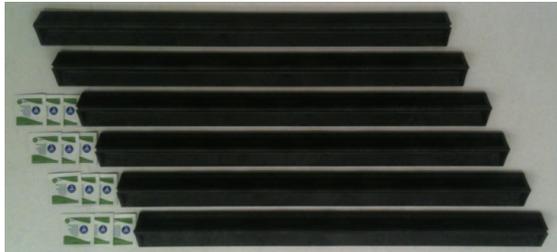


**Part #**  
**D.FM.BAR6**  
**Color: black**


**Use for:**  
Countertop  
equipment

**Kit Contains:**

- 6) 24" x 2" rear mounted bar with 3m VHB (very high bond) adhesive
- 12) surface prep pads
- 1) Instruction sheet

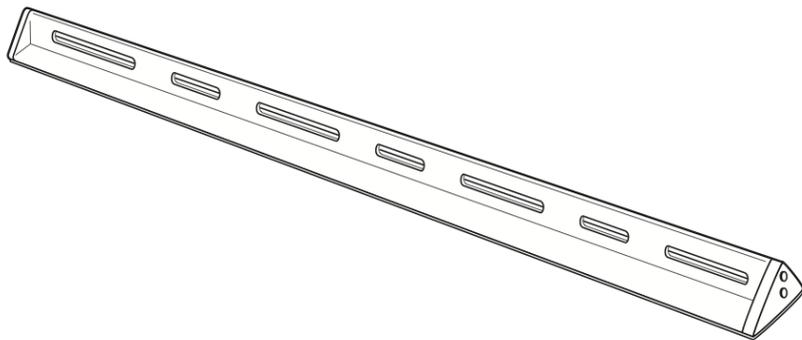

Note: To team together, simply slide the end with the post into the end with the notched groove.

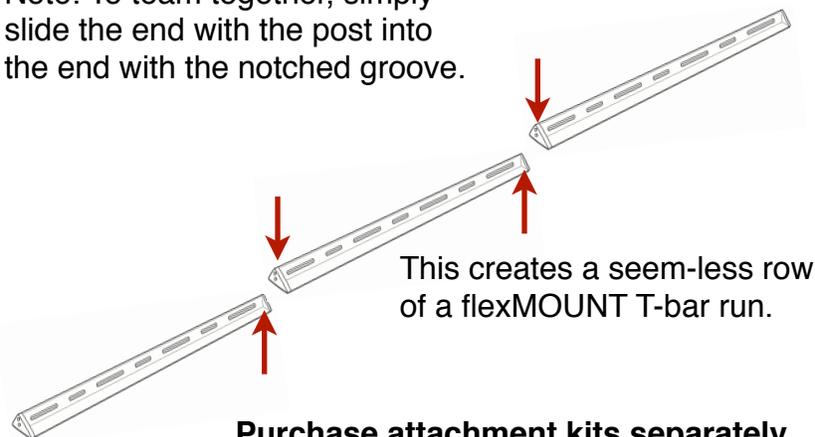

**Purchase attachment kits separately.**

## IMPORTANT INFORMATION

FlexMOUNT T-Bars are designed to be used on equipment sitting on a flat surface. They are not intended to hold weight with vertical (hanging) tension. The adhesive is not effective on wallpaper, wallboard, leather, or fabric-covered surfaces.

Prior to application of adhesive, equipment and tabletop surfaces must be properly prepared. There are non-visible particles that need to be removed prior to application of adhesive. Use the provided surface prep pads (70% isopropyl alcohol) and follow the installation instructions. If extensive surface preparation is required, use bottled 70% isopropyl alcohol (available in most drug stores) and a terry cloth towel.

## INSTALLATION INSTRUCTIONS

1. Position T-Bar in the desired location at the back of the countertop with the two end pins facing left, then remove.
2. Using the provided surface prep pads, vigorously scrub the surface where the T-Bars are to be adhered. Wipe dry with a terry cloth or paper towel. **The surfaces must be completely dry.**
3. Remove release paper from the back of the T-Bar and place adhesive on on desired location. **Do not touch adhesive;** skin oils make the adhesive less effective. Firmly press the 3M onto the equipment. **The greater the pressure, the stronger the bond.**
4. Using wood dowel, press vigorously along the entire length of both sides of T-Bar base.
5. For additional T-Bars on the countertop, use instructions 1 through 4 above by sliding the end pins into the slot from the top. This will help in aligning the bars in a straight line.
6. Repeat Steps 1 through 5 for the remaining T-Bars.
7. Do not disturb fasteners for 72 hours. This is the adhesive curing time.

**ARE THERE ANY GUARANTEES?** Ready America® products are engineered and tested to meet anticipated quake stresses and significantly reduce the risk of damage and injury during an earthquake. Unfortunately, the forces of nature are great and unpredictable. Therefore, the performance of these products can not be unconditionally guaranteed under earthquake conditions. Neither seller nor manufacturer shall be liable for any injury, loss, or damage, direct or inconsequential, arising out of the use of, misuse of, or inability to use the product. Ready America's only obligation shall be to replace its defective products prior to installation. Before using, user shall determine the suitability of the product for its intended use and shall only use the product after following instructions for use.

Copyright© January 2012 Ready America, Inc., Escondido, CA  
Ready America® is a registered trademark of Ready America, Inc.  
QuakeHOLD!™ is a trademark of Ready America, Inc.  
3M® is a registered trademark of the 3M Corporation  
Customer Service/Product Information/Instruction Sheets/  
7/02/13 QH-D.FM.BAR6

**Technical Assistance:**

800-997-2338 • [dennis@quakeholdindustrial.com](mailto:dennis@quakeholdindustrial.com) • [www.quakeholdindustrial.com](http://www.quakeholdindustrial.com)