




FlexMOUNT

Microscope/Monitor Bio Locking Strap




Earthquake Fastener

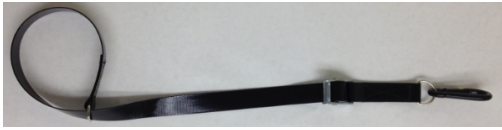

Part #
D.FM.MIC.1
Color: black

Use for:
Countertop
equipment
< 25 lbs

Kit Contains:
1) 12" Bio Strap with
buckle & carabiner
1) Instruction sheet

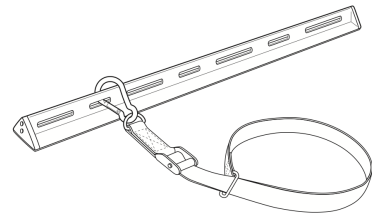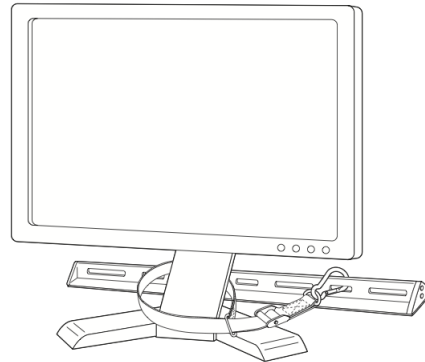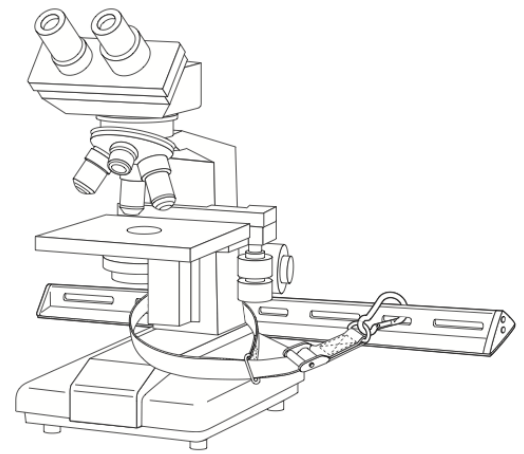

NOTE: Flex Mount Bar **NOT** included with kit. Order Bars as Part number: **D.FM.BAR6**

IMPORTANT INFORMATION

Microscope Bio Locking Straps are designed to be used on equipment sitting on a flat surface. They are not intended to hold weight with vertical (hanging) tension. The adhesive is not effective on wallpaper, wallboard, leather, or fabric-covered surfaces.

Prior to application of adhesive, equipment and tabletop surfaces must be properly prepared. There are non-visible particles that need to be removed prior to application of adhesive. Use the provided surface prep pads (70% isopropyl alcohol) and follow the installation instructions. If extensive surface preparation is required, use bottled 70% isopropyl alcohol (available in most drug stores) and a terry cloth towel.

Items taller than they are wide may require two attachment kits.

INSTALLATION INSTRUCTIONS

1. Position the equipment on the countertop in the desired location.
2. Snap the fasteners to the FlexMOUNT Bar so that they come to the sides or straight out to the center of the equipment. (Placement depends on what unit is being secured)
3. Take the strap end without the O-Ring and place the lasso around the unit being strapped.
4. Pass the end with out the O-Ring and run it through the O-Ring insert.
5. Take the strap and run it through the back of the buckle.
6. Take the excess strap and run it back through the open slot of the buckle to tuck away.
7. Repeat Steps 1 through 6 for the remaining Microscope Bio Locking Strap.
8. Do not disturb fasteners for 72 hours, if the FlexMOUNT Bar has just been placed. This is the adhesive curing time.

ARE THERE ANY GUARANTEES? Ready America® products are engineered and tested to meet anticipated quake stresses and significantly reduce the risk of damage and injury during an earthquake. Unfortunately, the forces of nature are great and unpredictable. Therefore, the performance of these products can not be unconditionally guaranteed under earthquake conditions. Neither seller nor manufacturer shall be liable for any injury, loss, or damage, direct or consequential, arising out of the use of, misuse of, or inability to use the product. Ready America's only obligation shall be to replace its defective products prior to installation. Before using, user shall determine the suitability of the product for its intended use and shall only use the product after following instructions for use.

Copyright© January 2012 Ready America, Inc., Escondido, CA
Ready America® is a registered trademark of Ready America, Inc.
QuakeHOLD!™ is a trademark of Ready America, Inc.
3M® is a registered trademark of the 3M Corporation
Customer Service/Product Information/Instruction Sheets/
7/02/13 QHI-D.FM.MIC.1

Technical Assistance:
800-997-2338 • dennis@quakeholdindustrial.com • www.quakeholdindustrial.com